

MotoTrack GPS

User's Guide



What's Inside

MotoTrack
5-Wire Wiring Harness
Quick Start Guide



Getting Started

Activating your Tracker

If you purchased your device pre-activated, you should have received an email containing your default login information before you received the device.

If you did not purchase a pre-activated tracker, please visit activate.brickhousesecurity.com to complete your device activation.

Installing the Device

The installation procedure for MotoTrack resembles that of a car audio system. MotoTrack operates on your vehicle's power. To install the device, link the wiring harness to the main unit, and subsequently connect the wire to your vehicle's ignition or power source.


The MotoTrack features an internal antenna crucial for GPS communication. During installation below the vehicle's dashboard, position the unit with its label facing downward, minimizing metallic interference. Furthermore, ensure the device is securely fastened to prevent shaking while the vehicle is in motion. Please refer to the wiring diagram on Page 4.






Test Driving the Device

Once installed, it is recommended to drive the vehicle for around 15-20 minutes to allow the device to register on the GPS network and begin reporting.

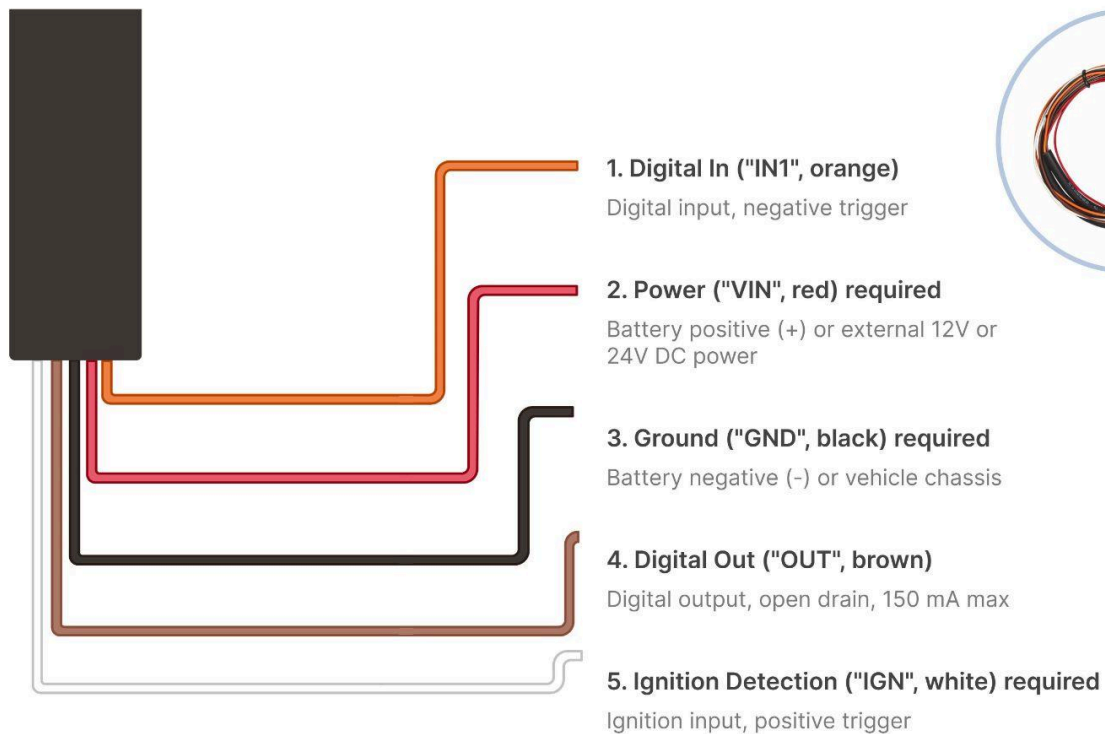If you experience weak signal strength, simply try moving the device to a different position and checking the platform to ensure that it has connected and is reporting.

Wiring Guide



Pin	Tracker Wire	Name	Label	Description
#1	 Orange	Digital Input	IN1	Digital Input (negative trigger)
#2	 Red	Power	VIN	12V or 24V System Power (operating range 8-32VDC)
#3	 Black	Ground	GND	System Ground
#4	 Brown	Digital Output	OUT	Digital Output (open drain, 150mA max)
#5	 White	Ignition Detection	IGN	Ignition (positive trigger, 5V-32VDC)

To get up and running, connect these three primary wires:

1. Connect the **Power wire (red)** to your vehicle's **positive (+) battery terminal** (12V or 24V).
2. Connect the **Ground wire (black)** to the **negative (-) battery terminal** or a metal part of the chassis.
3. Connect the **Ignition wire (white)** to a power source that only turns on with the key (like your accessory radio wire).

Q Tips: Use ring terminals or wire taps to ensure a secure connection. If you're unsure which wire is the RUN or accessory wire, we recommend using a professional installer. Always follow proper safety precautions and ensure all connections are tight and insulated before powering on.

Device LED and Interface



Device LED Description

LED	LED Status	Device Status
Cellular LED (Green)	Fast flashing	The device is establishing connectivity with cellular networks
	Slow flashing	Connected to the network and ready to track.
	Solid	SIM card needs a PIN to unlock. Please reach out to us for assistance.
GPS LED (Red)	OFF	The device is powered off. Connect to power to track.

	Slow flashing	GPS is not sending data
	Fast flashing	Connecting to satellites. The device is not ready to track.
	Solid	Connected to the satellites and ready to track.

The MotoTrack is motion-activated, it will only attempt to communicate with the platform when motion is detected, updating the tracker's position on the map. The device's LEDs help you troubleshoot any issues with the tracker.

When the vehicle is turned on, the device will power up and the GPS light should begin flashing, followed by the Cellular Light.

Once a GPS signal is located, the GPS light will turn solid. The Cell Light will then slow down but continue to flash once it has connected to the cellular network.

Installation (5-Wire Harness)

MotoTrack is designed for sensible, reliable installation in motorcycles, powersports vehicles, trailers, and light-duty vehicles. Professional installation is recommended for best results.

The three wires that are required for installation are Power (#2, red wire), Ground (#3, black wire), and Ignition (#5, white wire). The power wire is usually the vehicle's 12V or 24V battery positive wire and must be a DC power source in the range of 8V to 32V. The ground wire is usually connected to the vehicle chassis or the battery negative terminal. The ignition wire is usually connected to the "RUN" wire of the vehicle. *See Ignition Detection* for more information.

Ignition Detection

Mototrack determines its reporting interval based on its ignition status. When the ignition is on, Mototrack reports at its predefined periodic reporting interval (e.g. 1-minute, 30-seconds or 5-seconds). When the ignition is off, Mototrack conserves vehicle battery and reports 1-4 times per day. Mototrack determines this ignition state (On/Off) based on the status of the Ignition Wire (#5, white wire).

When the ignition wire senses between 5V to 32V, Mototrack decides the vehicle ignition is turned on. Between 0V to 3V, or if disconnected, Mototrack decides the vehicle ignition is turned off. Note that the range of voltages between 3V and 5V is intentionally ignored to reduce the chance of misdetection.

We recommend that the ignition wire is connected to the “RUN” position of the vehicle ignition switch or another wire that produces 5V to 32V only when the vehicle is on, e.g. the FM radio.

Tracking Your Device

The MotoTrack will send continuous location updates while the ignition is on and your vehicle is moving. The frequency of these updates will depend on the service plan for your device and can range from every 5 seconds to every minute.

If you plan on tracking a vehicle that will remain idle for extended periods, we recommend unplugging the MotoTrack to alleviate any risk of draining the vehicle's battery.

In the following pages, you will learn how to set up and customize the web interface of our Locate GPS tracking platform, as well as the mobile app, which is available in the iOS App Store and the Google Play Store. After that, you'll learn how to use some of the major platform features, like Tracks, Geofences, Notifications, and Reports.

Customizing and Tracking Your Device via a Web Browser

To start tracking your MotoTrack, open a browser window and go to www.BrickhouseSecurity.com. Hover your cursor over the Login tab on the top right of the website and click on GPS.

Using the temporary credentials provided by email, enter your email address and click the Next button. Enter your password and click Log In. You will be prompted to change your password. After you do that, the Monitoring page will appear, and your device's last reported location will be at the center of the map. You can also log in directly to the platform by visiting locate.brickhousesecurity.com.


Please Note: Both the username and password are case-sensitive.

If you have already registered in the system but forgot your password, enter your email address and click Next. On the next page, click on the **Forgot password** link. If the entered information matches the existing data in the database, instructions for setting your password will be sent to you via email.


If you pressed **Forgot your password?** by accident, delete the received email with a password reset link and use your previous login and password. If you follow the link, you must enter a new password. You can reset the password no more than once a minute.

User Menu

At the right corner of the top panel, the username used to log in is displayed. Clicking on the username opens a menu with the items listed below.

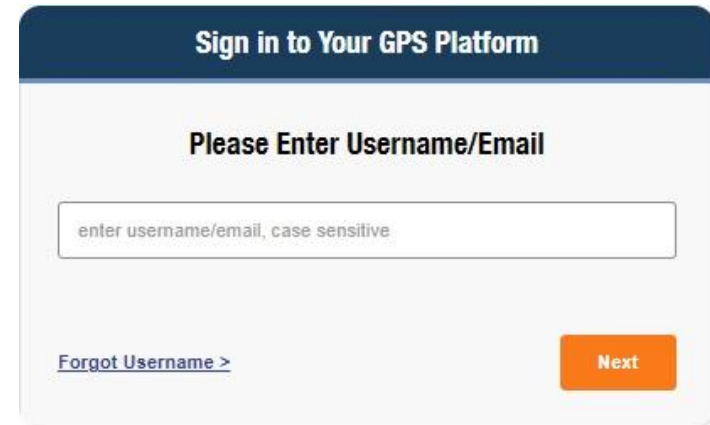

The screenshot shows a login form with a dark blue header containing the text "Sign in to Your GPS Platform". Below the header, the main content area has a title "Please Enter Username/Email". There is a text input field with the placeholder text "enter username/email, case sensitive". Below the input field, there is a link "Forgot Username >" and an orange "Next" button.

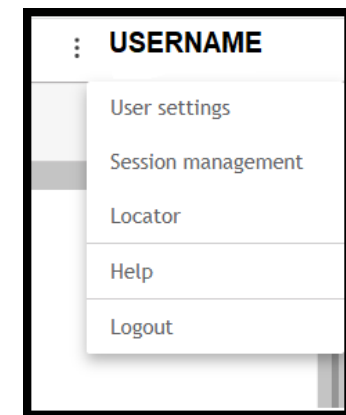

User settings	Open user settings for viewing and/or editing.
Session management	Open the Session management window. <i>Shows the list of applications with access to your account and devices that can receive mobile notifications from BrickHouse. The lists are created automatically after logging in to the application.</i>
Locator	Opens the Locator dialogue box. Allows you to share the unit location in real time.
Help	Request help from our Tech Support team
Logout	Click here to log out of the system.


User Settings

To choose user parameters, click on the username in the right corner of the top panel and press the 'User settings' button in the dropdown menu. Next, follow the steps:

- Indicate your time zone.
- Select the type of daylight savings time used in your region.

Please select the settings properly, as they will be used when generating reports, messages, and elsewhere throughout the system.


Indicate a city in the dialogue box to scale the map for tracking entries.

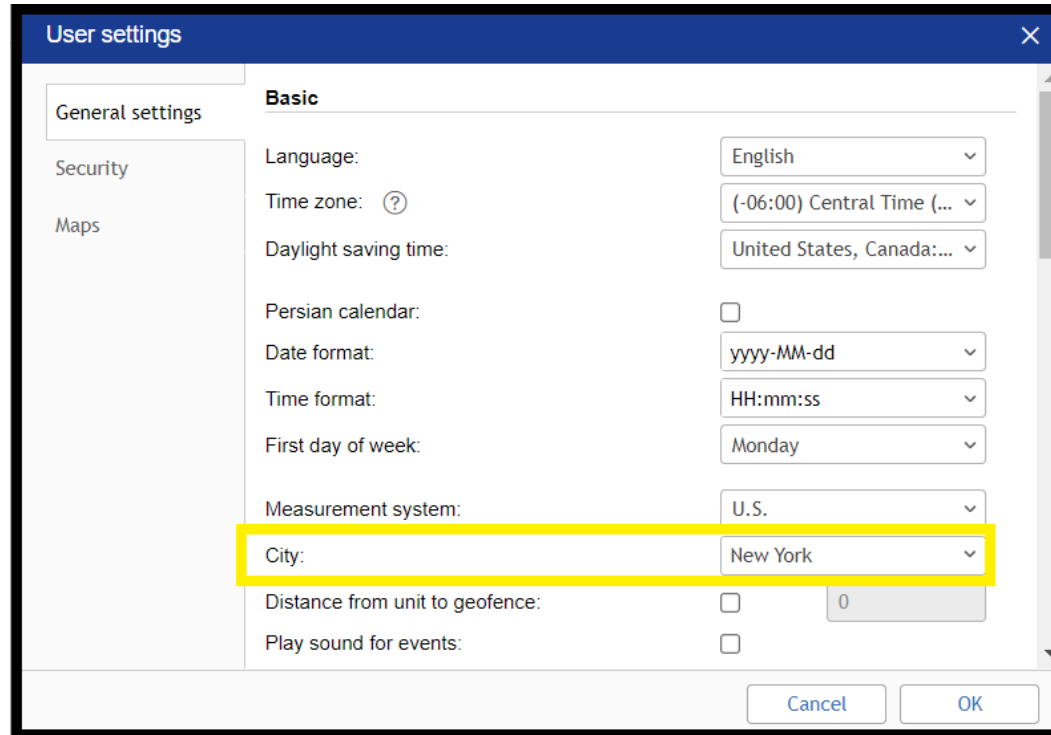

Editing Your Unit

Make sure the device is displayed on the monitoring tab before editing a unit.


Click the wrench icon next to the unit you want to edit in the 'Units' tab of the work area.

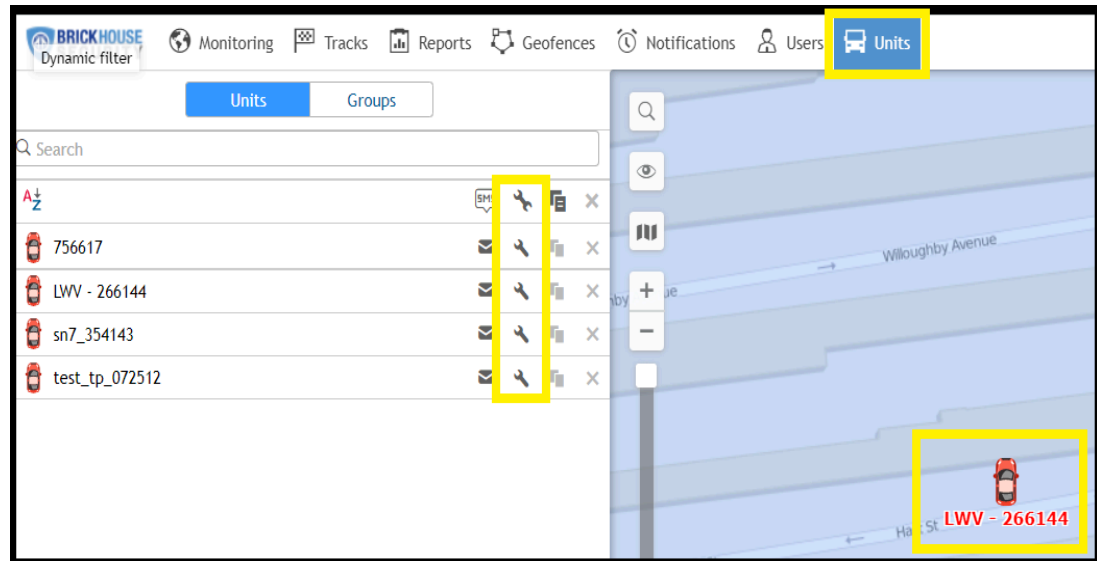

When shown on the map, a unit is represented by an icon with a caption displaying its name.


The icon is selected during the configuration process and can be chosen from a standard set of icons or uploaded from your device on the Icon tab.

The orientation of the icon can be adjusted to match the course or direction of the unit, as defined in the unit properties.

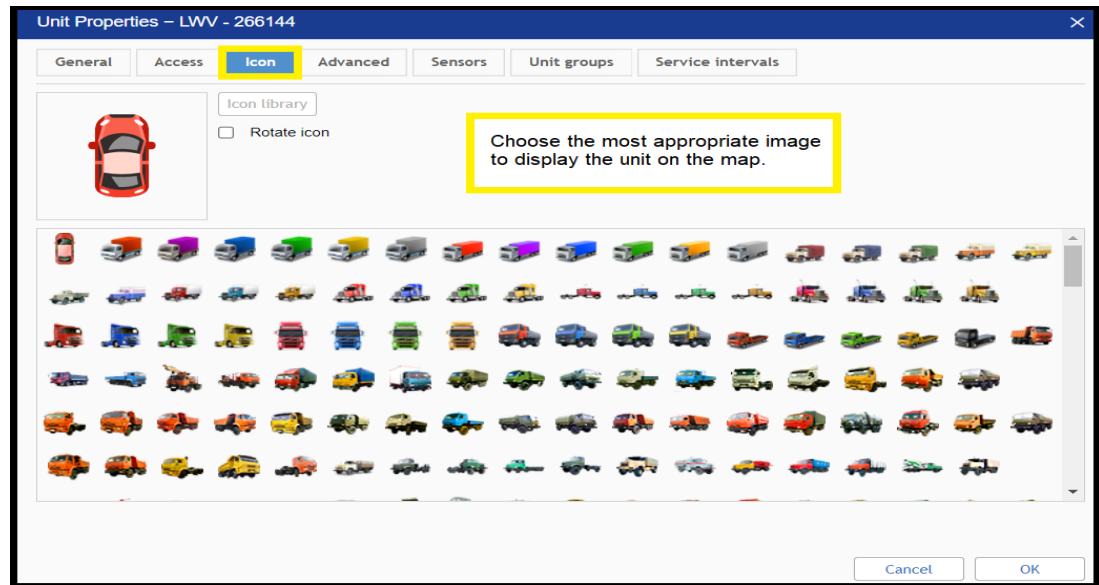


Alternatives to Icons

Unit icons can be replaced with simple motion indicators. This option is called **Replace unit icons with motion state signs** and is set in the user settings.

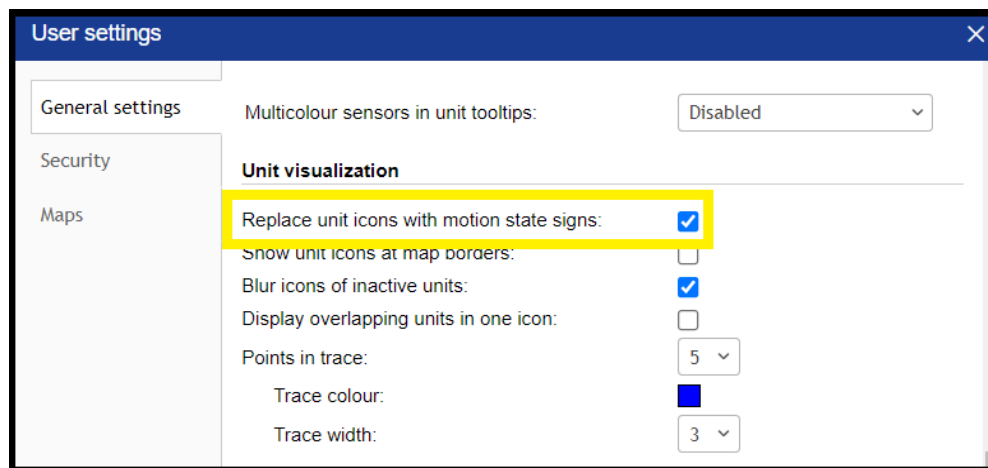


The following symbols are:

- Green arrow: the unit is moving, and the direction of the arrow indicates the direction of movement
- Red square: the unit is not moving
- Yellow circle: the unit is receiving power from the ignition, but not moving

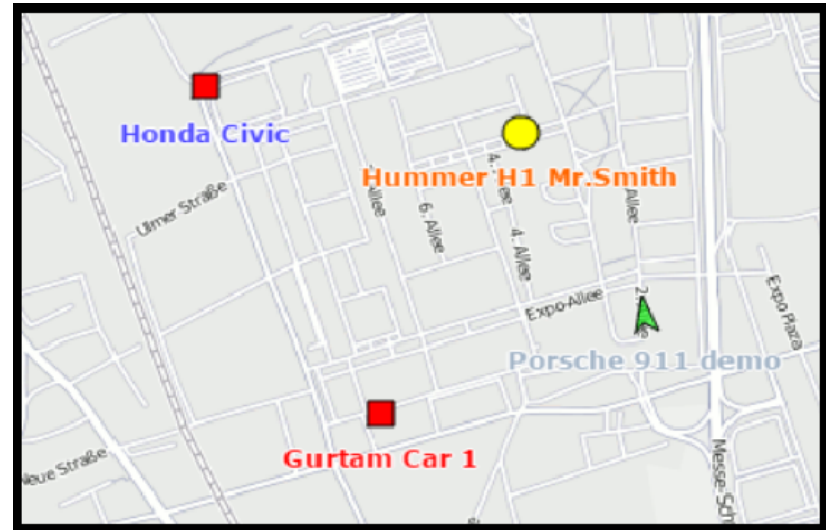

Monitoring Tab

The Monitoring tab gives access to the main tracking features. Here you can watch the movement of units on the map, send commands and messages to them, monitor parameter changes online, etc.

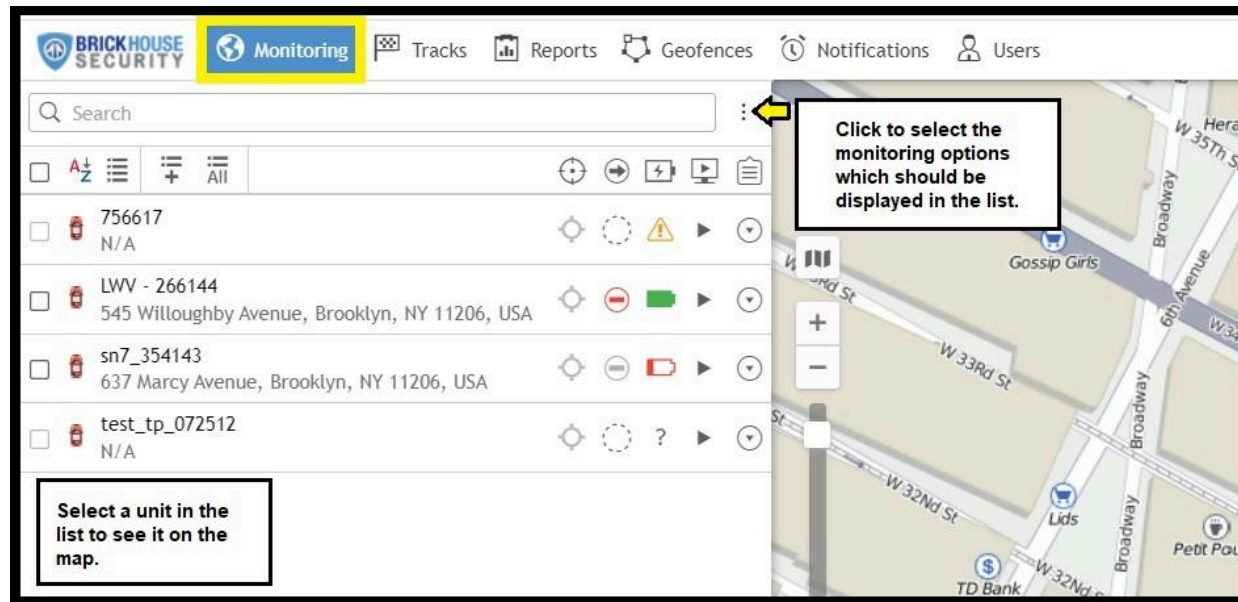

To open the Monitoring tab, click on its heading in the top panel. The tab has a list of units that you can monitor on the map. The list can contain all units available or just some of them. You can easily add and remove units from the monitoring list, which does not lead to their removal from the system.


To quickly find a unit in the list, use the dynamic search bar above it. Next to the name of each unit, some icons allow you to assess the state of the unit or perform certain actions. Above them, in the header of the table, some icons allow you to order units according to various parameters. To display the icons in the work list, configure the monitoring options.

To locate a unit on the map, click on its name in the list. The map centers and zooms in on the selected unit.

The map displays only those units that are selected in the list. You can select or deselect all units at once using the checkbox in the top left corner of the list.

You will see the selected units on the map if they are in the visible area. You can move and zoom the map if needed, controlling your view the same way you would in most online mapping platforms.

If the **Show unit icons at map borders** option are activated in the user settings and the unit leaves the visible area of the map, its icon will be displayed on the edge of the map.

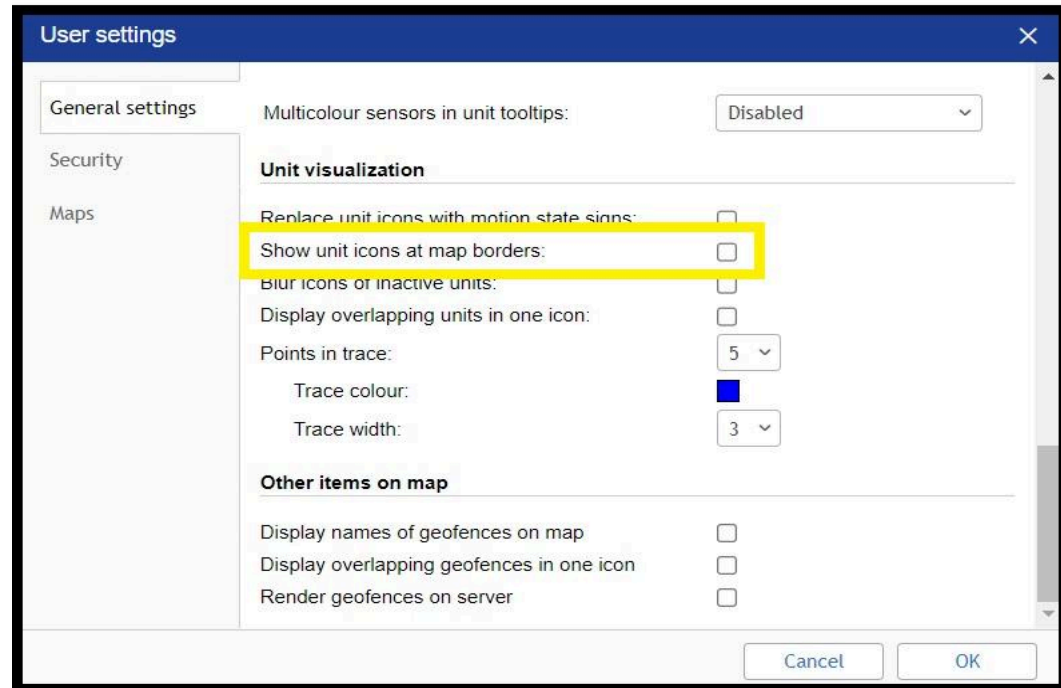

Click on the icon to move to the unit on the map.




To keep the location of a unit on the map, click on the **Watch unit on map** icon. When a new message is received from the unit, the map is automatically scaled so that you can see it.

Tracks Tab

A track is a line drawn on the map to show how a unit moved during the indicated period. A track is mapped using the points from where messages were reported. Each point stores the date and time when the message was received and coordinates at the point, as well as other parameters (speed, sensors, etc.).

To open the **Tracks** tab, select a corresponding name in the top panel or click on the necessary item in the main menu customizer.

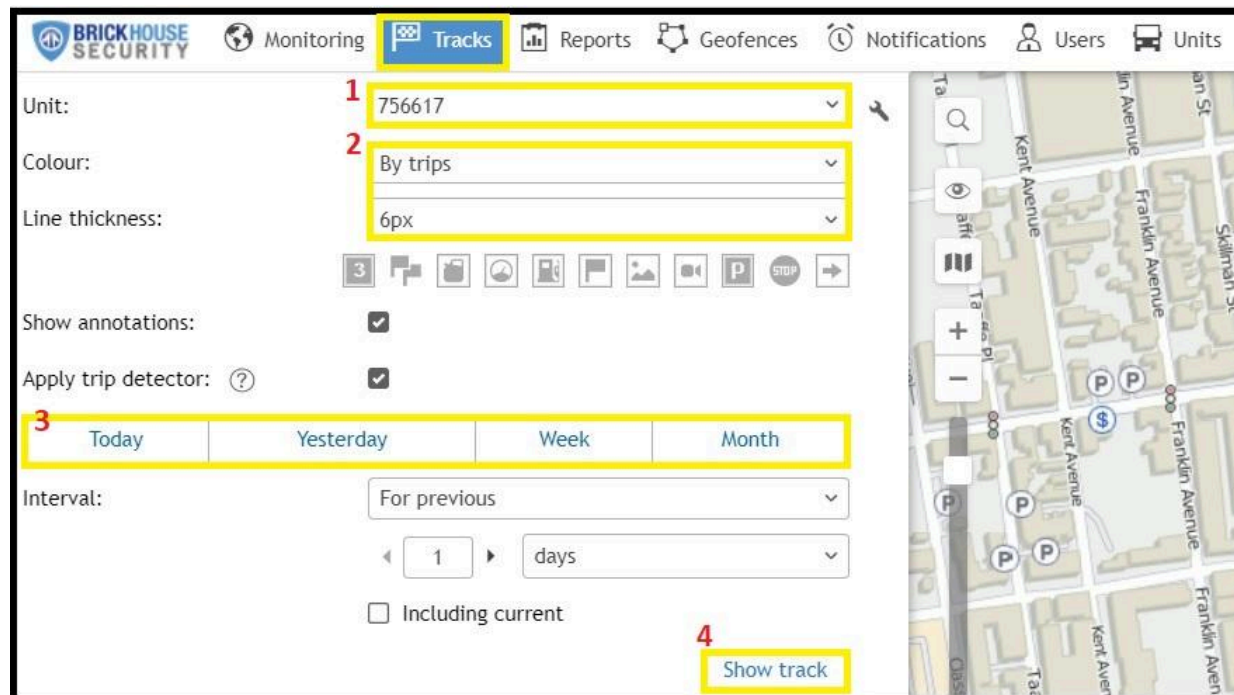

Mapping a Track

1. Select a **unit** in the dropdown list. Its contents depend on the list in the **Monitoring** tab and access to the units.
2. Adjust the desired **parameters** for the track (color, thickness, etc.).
3. Define the **time interval** within which you want to get the data.
4. After filling in all the fields, press **Show Track**.

Markers

To highlight important events on the track, you can enable the display of markers. The set of available markers is the same as in the reports, but some require additional sensors to be installed in a vehicle:



- fuel theft



- speeding



- fuel filling



- event (violations are identified by the marker)



- image from messages



- video from messages



- parking place





- stop



- initial and final positions (final positions are identified by the marker)

Below, we see the result of choosing a single track (one solid color), but you can also select to show a single unit with varying colors for different sensor values and speeds.

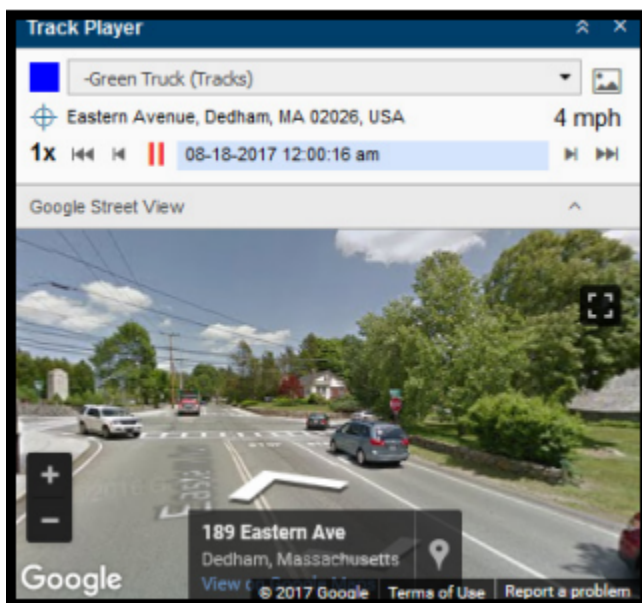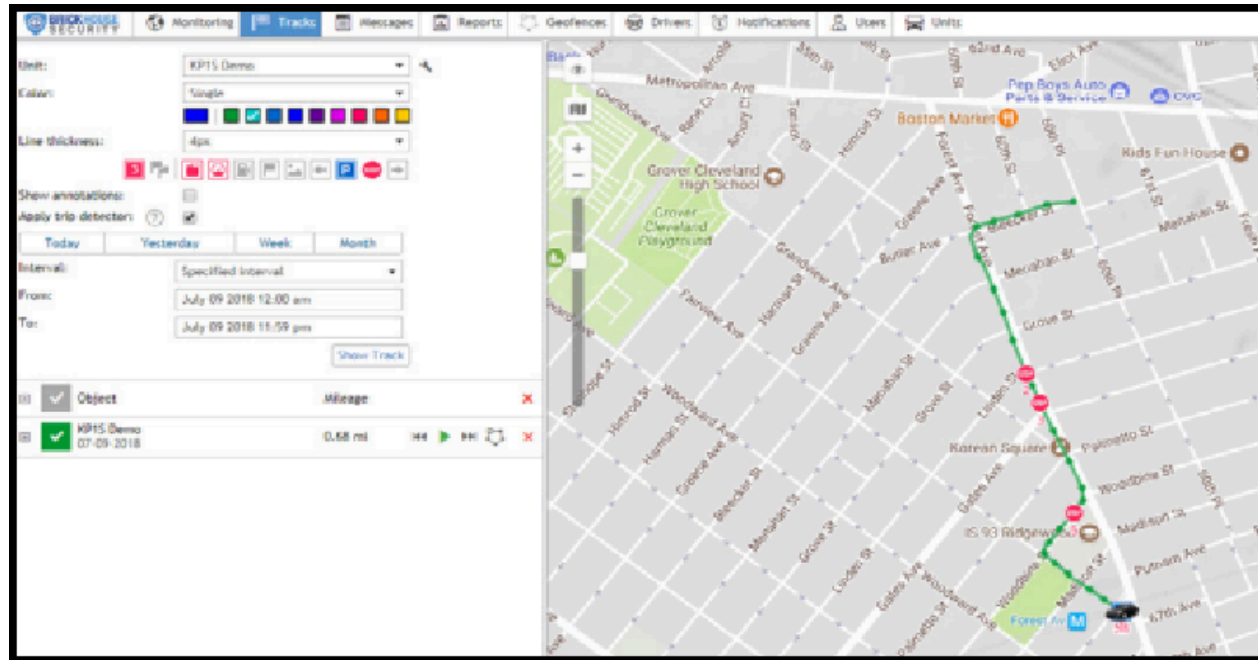


This will display the trip for the requested time period. You can now see the trip and play it back.

The **track player** will control the playback on the map and also includes Google Map street view images that correspond to the playback on the map.

You may also have a section for sensor values to watch during the playback.
Also, you can click on the circled icon below to see the trip as a geofence in the result line.




If you hover the mouse over the icon on the map on the tracking tab, the tooltip will provide you with information.

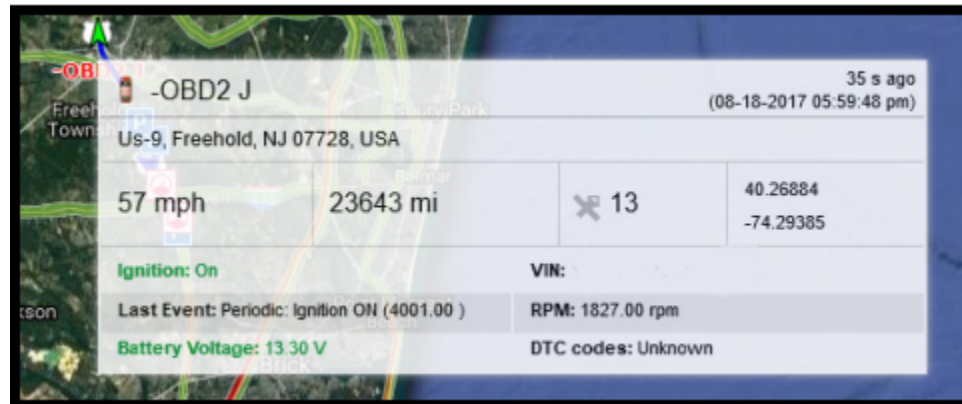

Reports Tab

To switch to the **Reports** tab, click the **Reports** header in the top panel and select the same name item in the main menu customizer.

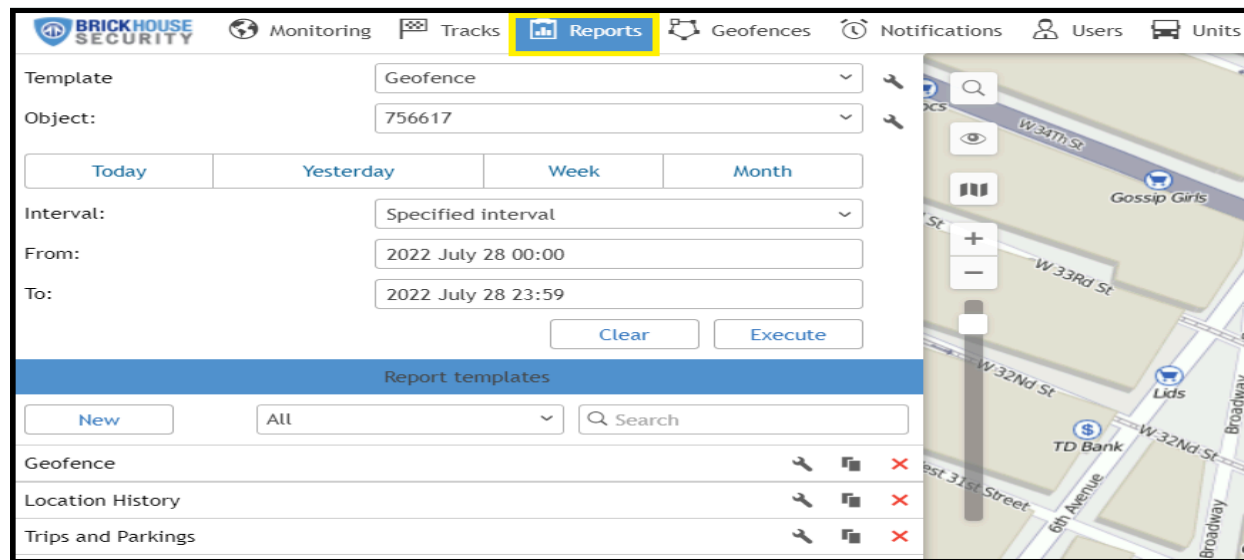

Reports on the activity of a unit are presented in the form of tables and graphs. They can be viewed in a browser window, as well as exported to files of various formats.

We have created report templates to make finding the data you need easy. The most useful is the activity report, which includes most data available in its tables. Other report types are customized to suit your needs, so you don't have to hunt through the tables.

To obtain a report, set parameters in the work area: select report template, unit, and reported interval, then press Execute.

Geofences and Notifications


Creating a New Geofence

By setting up a geofence and creating notifications, the platform can alert you when a GPS device you are monitoring enters or exits the defined area. You can be notified via text or email if it crosses into or out of the zone.

Geofences can report units' activity in these areas or, on the contrary, outside them. You can choose an image for a geofence or add a description. A geofence can have the shape of a line (for example, following an avenue or any road), a polygon (a city park or neighborhood), or a circle with any radius.


To set up your first geofence, please follow the steps below.

1. Log in to your GPS account on the desktop site and click the "Geofences" Tab.

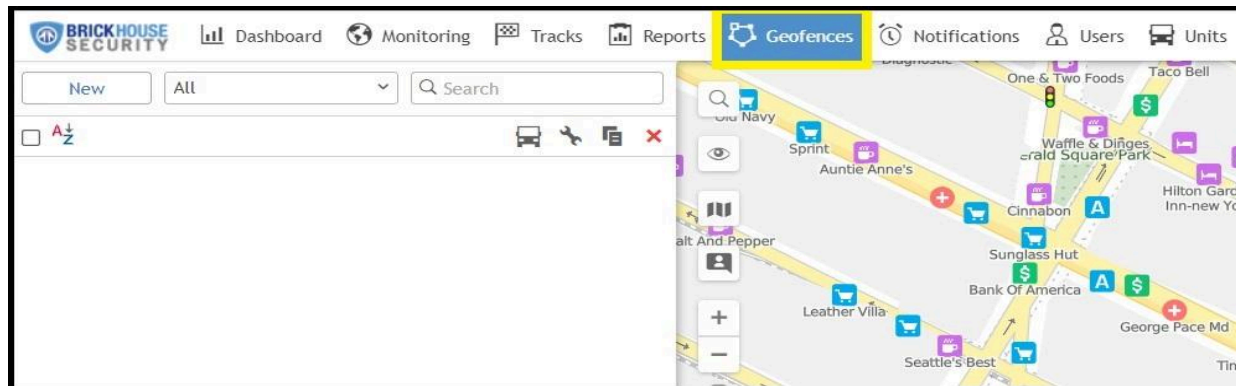


2. Click the magnifying glass icon and type in an address.

Tip: Zoom into the area on the map where you would like to create the geofence. To get the most accurate results, be sure to center the geofence on the primary location and make it large enough to enclose the surrounding perimeter outside the fixed address.

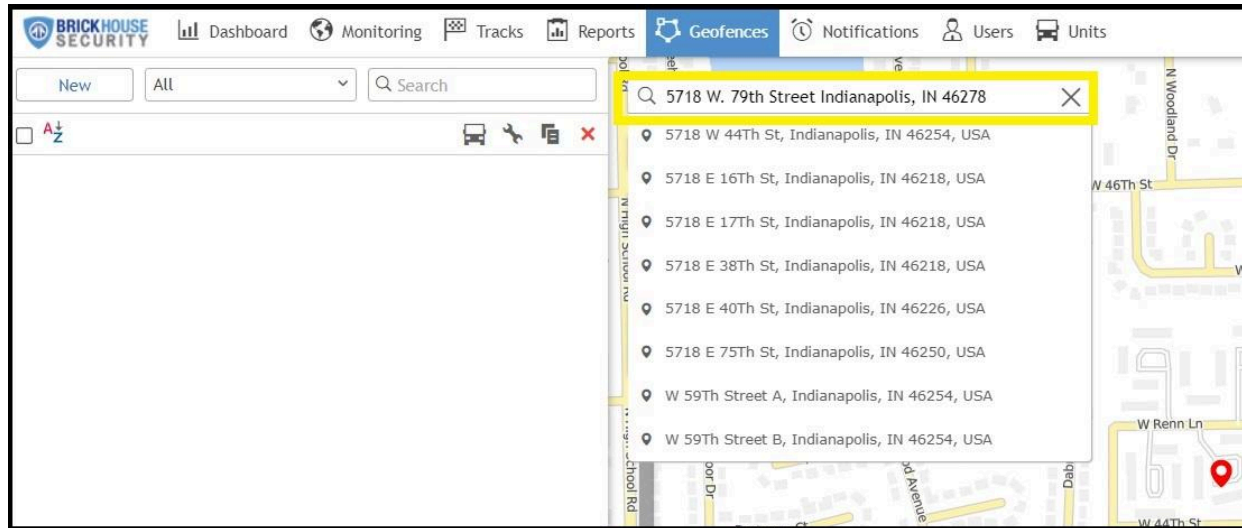


3. Click on **New** in the menu and give your geofence a clear name and description. It will be helpful when you receive alerts, as you will know which geofence is being triggered and can find the vehicle quickly.

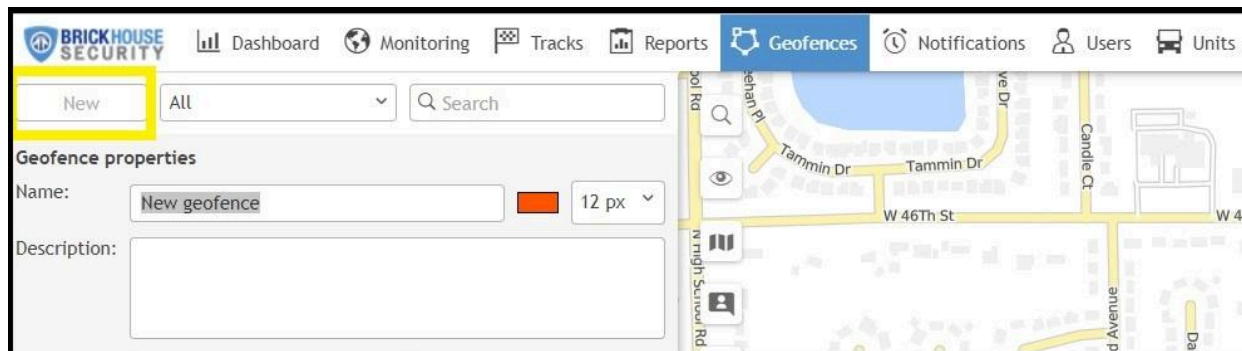


4. After clicking the New button, a help window appears to provide you with instructions for drawing geofences. Choose a geofence type on the left: line, polygon, or circle.
Map a geofence. Here are the basic rules for mapping a geofence:

Line:

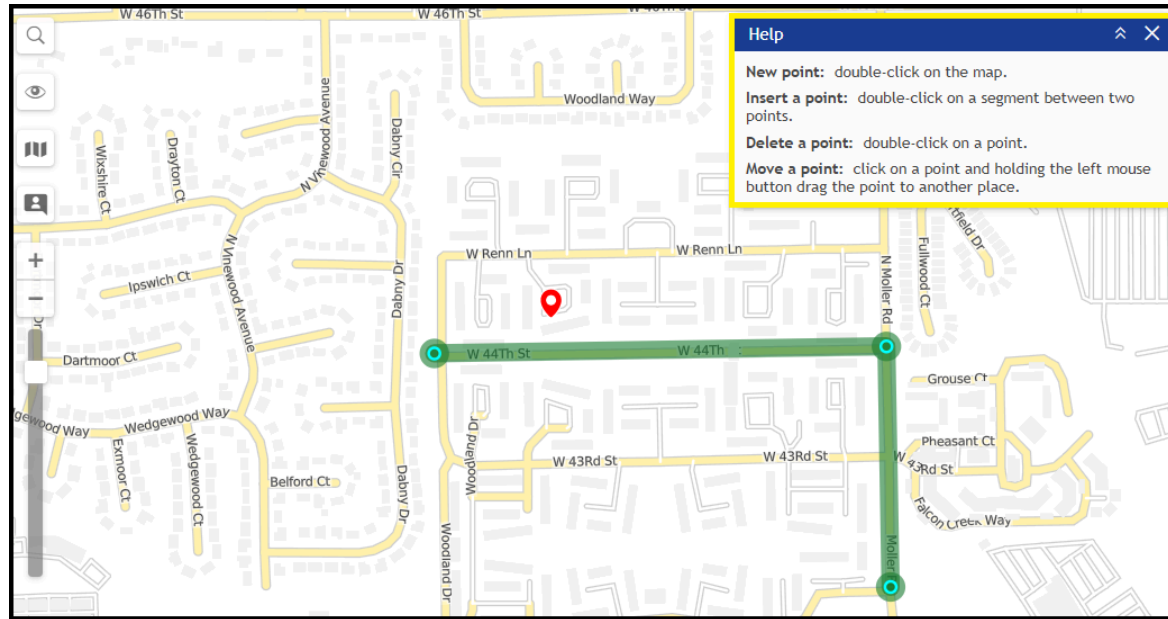

Polygon:

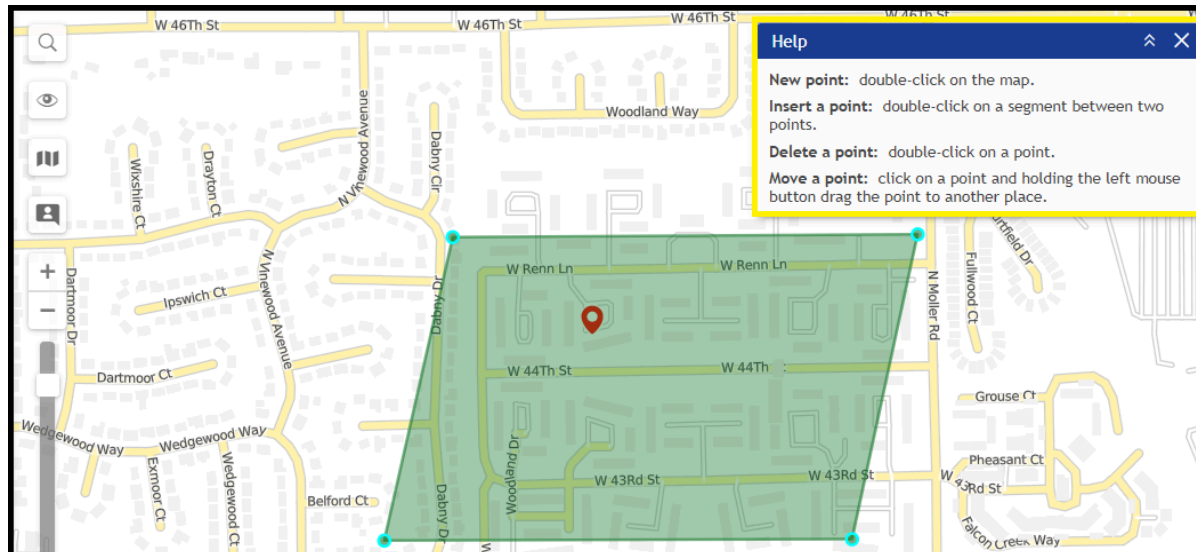


When finished, press Save. In case of a mistake, press Clear and try again. To close the create mode without saving results, press Cancel.

It is **IMPORTANT** that you create a notification for the newly created geofence for you to receive alerts.


Creating a new Geofence Notification

In the BrickHouse Locate GPS platform, you can receive notification for any unit activity or change in the device's state. It can be speeding, change of location, sensor values, or other event. A notification can be delivered by email or SMS, shown online in a popup window, etc. This tutorial is for creating a new Geofence Notification.

1. Go to the Notifications tab and select New.



2. Select the device by ticking the box, then click **Next**.

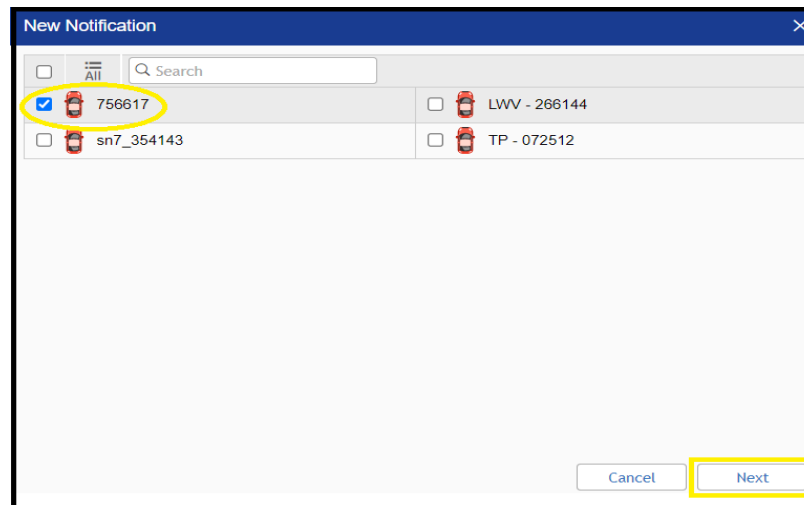

3. Choose **Geofence** and click **Next**.

The screenshot shows a 'New Notification' dialog box with a blue header and a close button (X) in the top right corner. Below the header, the text 'Choose trigger type:' is followed by a grid of radio button options. The 'Geofence' option is selected and highlighted with a yellow box. At the bottom right of the dialog, there are three buttons: 'Cancel', 'Back', and 'Next'. The 'Next' button is also highlighted with a yellow box.

Choose trigger type:	
<input type="radio"/> Speed	<input checked="" type="radio"/> Geofence
<input type="radio"/> Alarm (SOS)	<input type="radio"/> Digital input
<input type="radio"/> Parameter in a message	<input type="radio"/> Sensor value
<input type="radio"/> Connection loss	<input type="radio"/> Idling
<input type="radio"/> SMS	<input type="radio"/> Interposition of units
<input type="radio"/> Address	<input type="radio"/> Excess of messages
<input type="radio"/> Fuel filling	<input type="radio"/> Fuel theft
<input type="radio"/> Maintenance	

Buttons: Cancel, Back, Next


4. Select when the notification should be triggered:

- When the unit enters the geofence (Inside geofence);
- When the unit leaves the geofence (Outside geofence).

Select the resource whose geofences should be displayed in the list (select All available to view the geofences of all available resources).

In the left list, select the geofences or groups of geofences (displayed in square brackets) for which the notification should be triggered. You can use the dynamic filter above the list to search.

Using the icon >> , move the items from the left list to the right one.

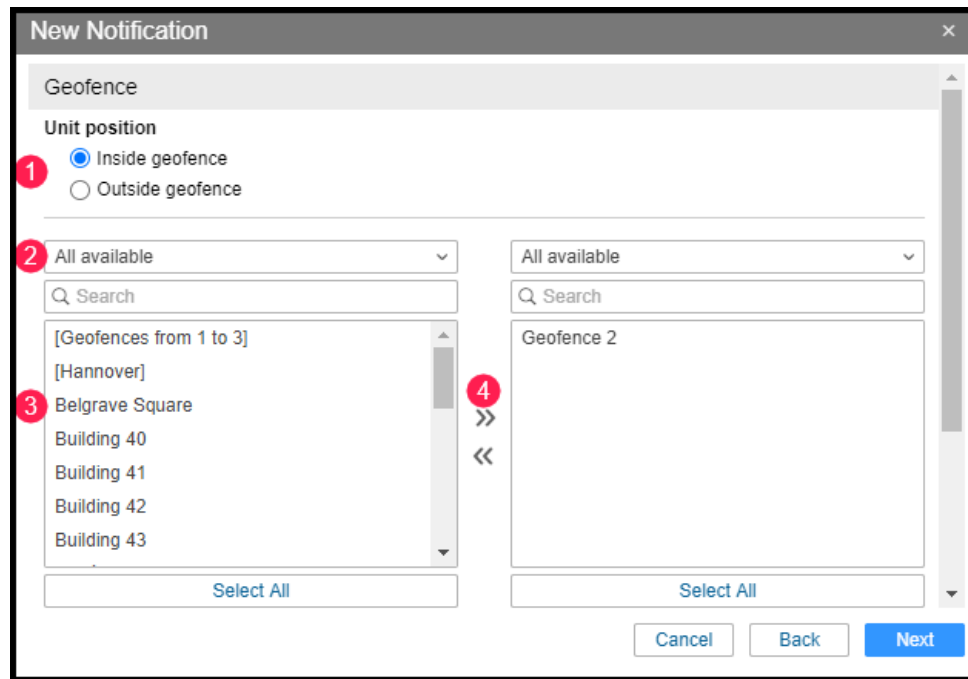

5. Select Notification Actions

Notify by email - When this action is selected, you can add email addresses to which the notification should be sent. To do this, check the box to the right of the field and specify an address.

After specifying the address, a new field is added automatically. To cancel sending the notification to any added address, uncheck the box to the left of it.



Notify by SMS - This action is used to set up SMS notifications. Type one or more telephone numbers in the international format, for example, +375293293294.


When all fields for entering phone numbers are filled in, additional slots appear automatically.



Notify by SMS

+85292223311

6. Customize the format of the message you would like to receive and click on **Next**.

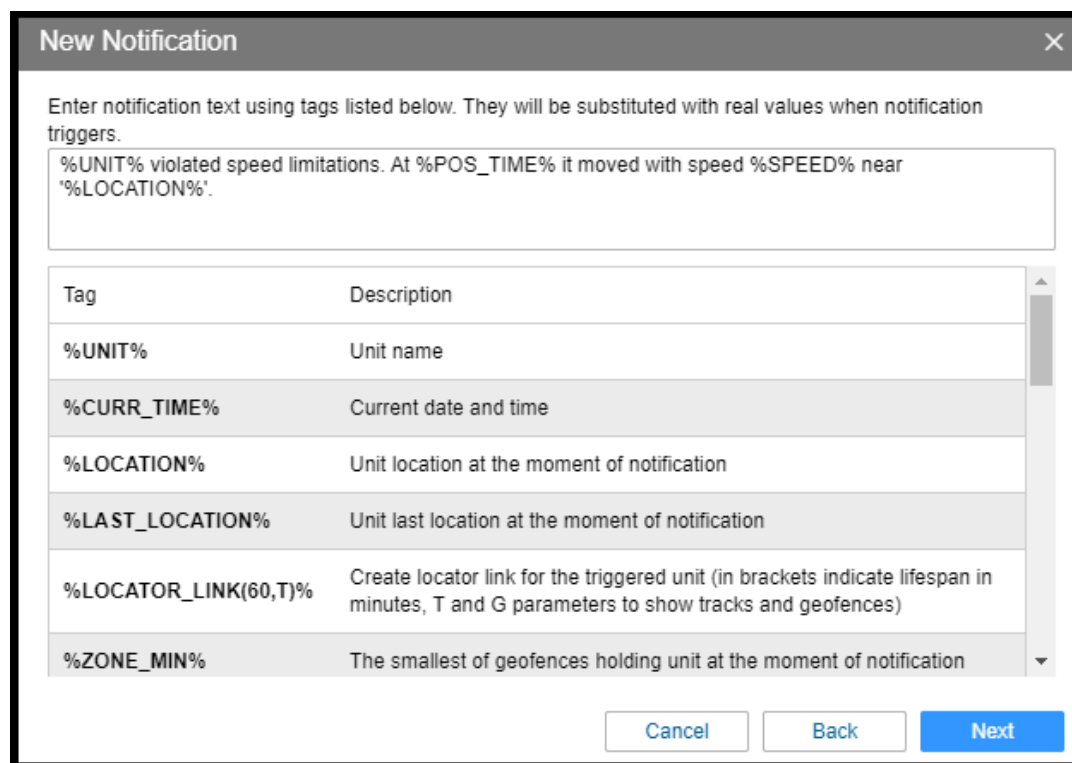

New Notification [X]

Enter notification text using tags listed below. They will be substituted with real values when notification triggers.

%UNIT% violated speed limitations. At %POS_TIME% it moved with speed %SPEED% near '%LOCATION%'.

Tag	Description
%UNIT%	Unit name
%CURR_TIME%	Current date and time
%LOCATION%	Unit location at the moment of notification
%LAST_LOCATION%	Unit last location at the moment of notification
%LOCATOR_LINK(60,T)%	Create locator link for the triggered unit (in brackets indicate lifespan in minutes, T and G parameters to show tracks and geofences)
%ZONE_MIN%	The smallest of geofences holding unit at the moment of notification

7. At the last stage of creating a notification, specify the parameters for its triggering and click OK. The created notification appears in the list in the left part of the window.

New Notification [X]

Name: Speeding

Description: Add description

Time interval (from - to) :

Control period from current time: For last hour

Min duration of alarm state: 60 seconds

Max triggers: 2

Generate notification:

Only when state changed

For all messages

Min duration of the previous state: 5 seconds

Max time difference between messages: 1 h

Timeout: 0 seconds

Enabled:

Cancel Back OK

Getting to Know the BrickHouse Locate GPS Mobile App

The BrickHouse Locate GPS mobile app is available on the Google Play and iOS App Store and can provide you with the same advanced tracking functionality as the web-based GPS platform. The app can be used on any smartphone or device that runs on Android or iOS.

Some of the features included in the app are:

- Tracking of current device location as well as historical data, including all trips and stops
- Ability to run and externally share Reports that are available on the web platform
- Ability to receive and manage notifications

The next pages will include screenshots and descriptions of the app features and settings.



Download the BrickHouse Locate GPS mobile application from your iOS App Store or Google Play store.



Please have your login credentials ready to access the platform through the mobile application. You should have received your login information via email when your device was activated.

Login Screen

Enter the same username and password you use on the web platform to log in to the mobile app.




If authorized, iPhone (iPhone) will obtain full access to your account.

Unit Selection

Once logged in, you will see the list of units active on the account under the Monitoring tab.


Adding items to the list

1. Select the Units or Groups tab.
2. Tap the icon  located to the right of the search and tap Select items.
3. Select the required units or unit groups. You can use the search or the Select All button to the right of it. In addition, you can use the Select All button to select all the items filtered by the search.
4. Save the changes.

The Monitoring tab gives access to the main tracking features.

- Choose the unit and watch the movement on the map.
- Send commands.
- Monitor the raw data received from the device, etc.
- Tap a device to view the current tracking information and history.

Scroll downwards to view in full size. Scroll upwards to view the tracker information.

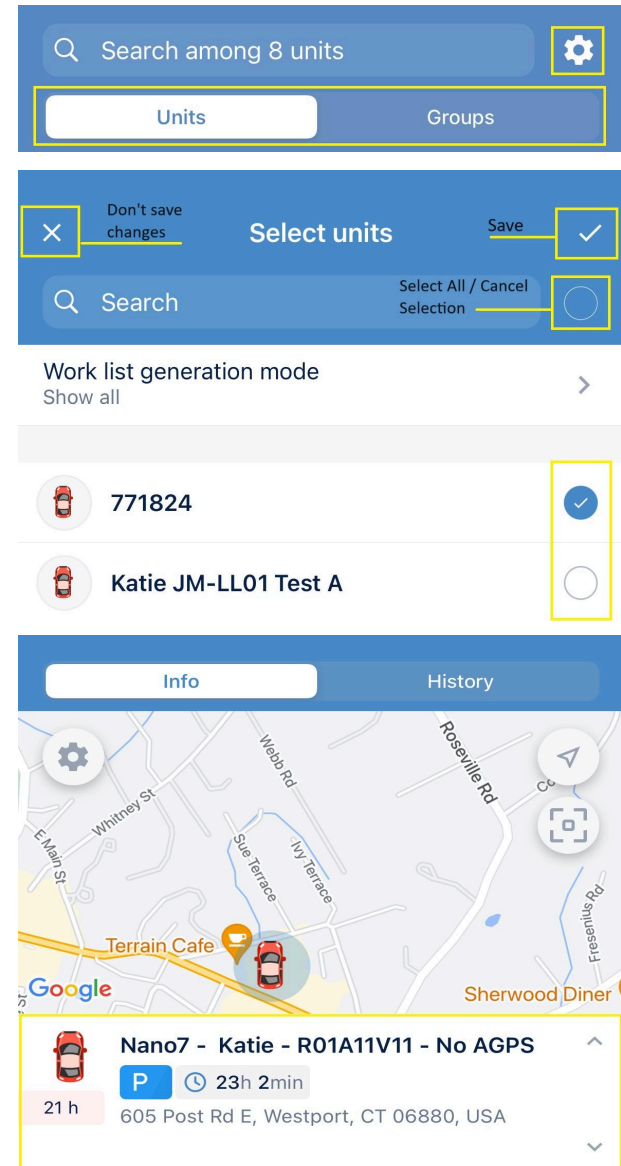

The **General information** section consists of tabs with unit properties.

To select the tabs you want displayed in the section, click **Configure tab view** at the end of the list and enable or disable the required tabs using the switch.


The indicated settings are applied to all the units at the same time.

Map View

The map can be viewed by tapping the map icon at the menu located at the bottom of the page. All units selected on the monitoring tab will be displayed on the map. The default view will center on your trackers and zoom out to a level that shows all of your units.

Interacting with Map

To quickly find a specific unit, type its name in the search bar.



To change any map settings (map layers, unit captions, and so on), tap the icon  in the upper-left corner.

Zooming

Use +/- to zoom in and out or use the following screen gestures:

- Double tap - zoom in.
- Two fingers tap - zoom out.
- Two fingers stretch/pinch - zoom in and zoom out, correspondingly.
- Double tap without releasing on the second tap, and then slide the finger down to zoom in or up to zoom out.

These controls can be enabled or disabled in the 'Map Settings' mode from the main Settings.

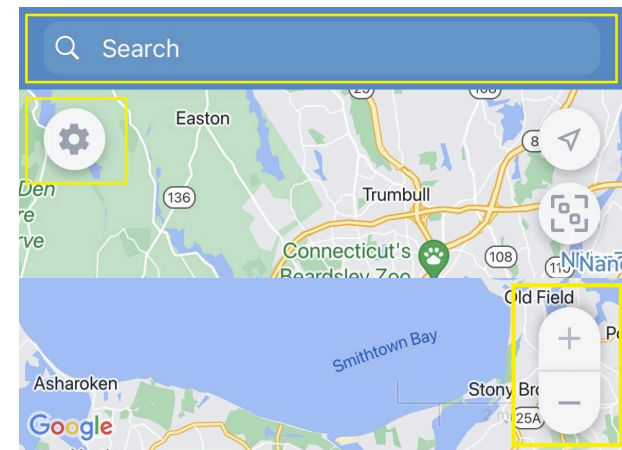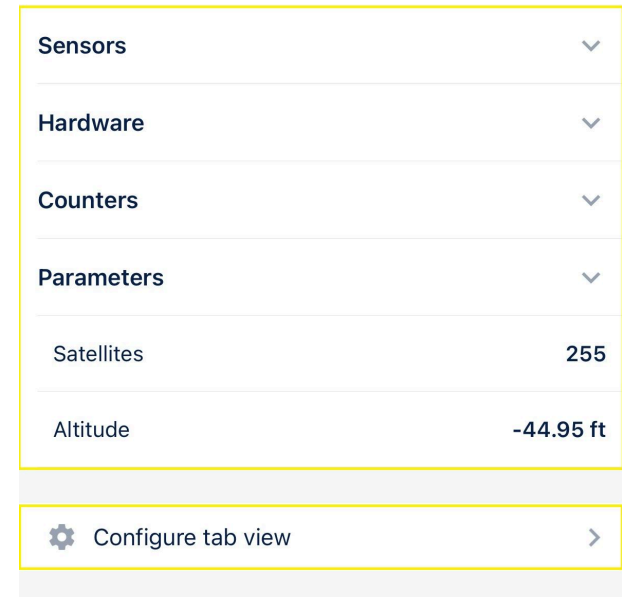




Tilt Gestures

You can tilt the map by placing two fingers on it and moving them up (increasing tilt angle) or down (decreasing tilt angle).


Map Rotation

To rotate the map, place two fingers and apply a rotation motion. After the map has been rotated, a compass icon appears in the top right corner. Tap it to return the map to the default position.

Finding your own location

To find your own location on the map, tap the icon . As a result, the map focuses on the location of your mobile device, and the icon turns blue. When you move around the map and lose the location marker, the icon  changes to  tapping which centers the map on the location of the mobile device.

To return to the device's current location, tap the  icon.


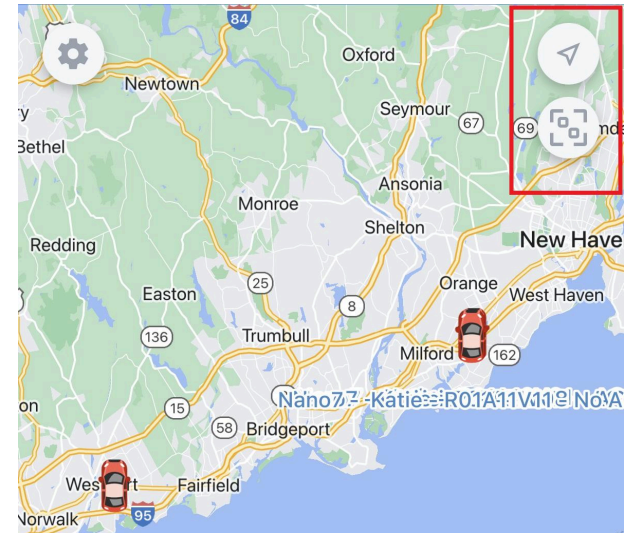


Tracking your Device (Historical Data)

History tab

The History tab shows the past tracking location of the unit. By default, the data is displayed for the current day.


Selecting a date will display the historic tracking data for that day.




The top row shows summary info.

- trip duration (🚗)
- track length in trips (📈)
- parking duration (P)


Clicking on the time of the day will move the map to show the position where the unit was.

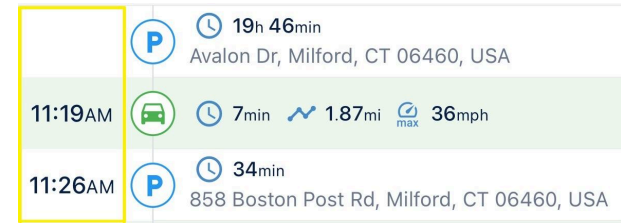

The top panel displays the menu in the upper right corner which opens when you click on the menu button.

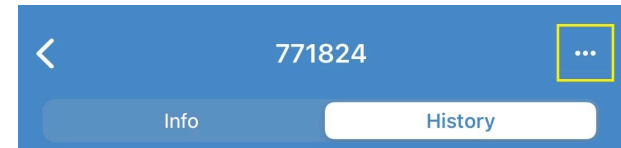

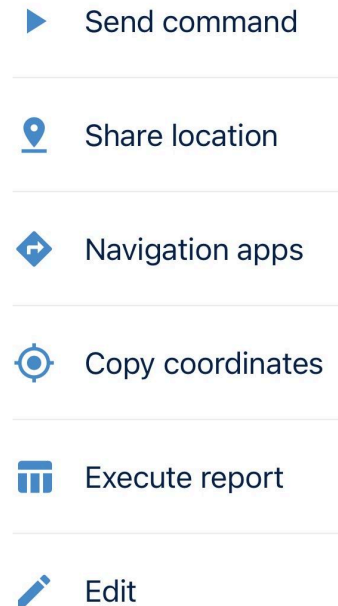

- Send command will send requests to your unit.
 - Ping will help locate the unit easily
 - Reboot will turn the unit off and on again
- Share location lets you provide a link that enables others to track your unit.
- Navigation apps will let you plan a route using another navigation app like Google Maps.
- Copy coordinates allow copying of the latitude and longitude of the unit to the clipboard so you can paste and search on mapping platforms.
- Run reports for the tracker you are currently viewing. See the Reports section of the guide for more details.
- Edit allows changing the name and icon of the unit.




Report Execution

To execute a report, follow the steps described below.

1. Select a report template.
 - Geofence
 - Location History
 - Trips and Parkings
2. Select a unit/unit group (depending on the selected template, the list shows all the available objects).
3. Specify the time interval. You can set it using the 'quick interval' (tap the icon ) or manually. To specify the interval manually, tap the start and end lines, and select the required dates and times. If you select the Week or Month quick interval, the report runs for the last full week or the last full month.
4. Select the page orientation of the report.
5. Tap Execute report.

The report is opened as a PDF file. You can open it in another application, send it by email or messenger, and so on (the icon  in the screen's upper-right corner).

The template, object, and page orientation selection is saved until the next time you run the report.

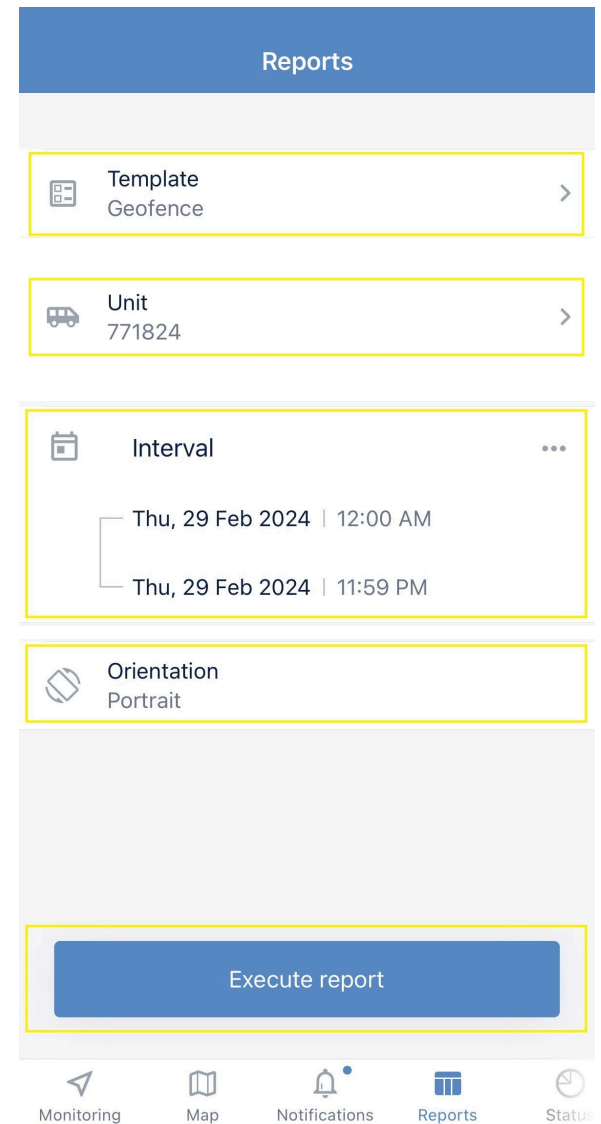

Thank you for choosing BrickHouse Security for your GPS tracking needs. For further support with the Locate GPS platform or anything else, please reach out to us by email, phone, or live chat at BrickHouseSecurity.com.

Email: support@brickhousesecurity.com

Phone: 800-654-7966

You can also find lots of learning materials including instructional videos on how to use specific features of the Locate GPS platform at:

help.brickhousesecurity.com

